REV·A·SHELF®

Your Worldwide STORAGE ORGANIZING *Accessory Source!*

2409 Plantside Drive
Jeffersontown, Kentucky 40299
Phone: 1-800-626-1126 (toll free)
www.rev-a-shelf.com

COMPAGNUCCI®

WIRE PRODUCTS AND ENGINEERING

Cesto estraibile • Pull-out basket

A3OISTR0194 March, 2003

1 (8) M5x6

2 (4) 3.9x16

3 (4) 4x20

4  (8) 4x12

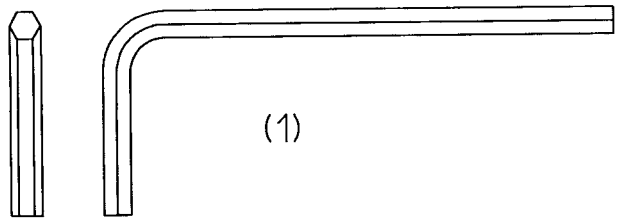

(1)

Bottom Application

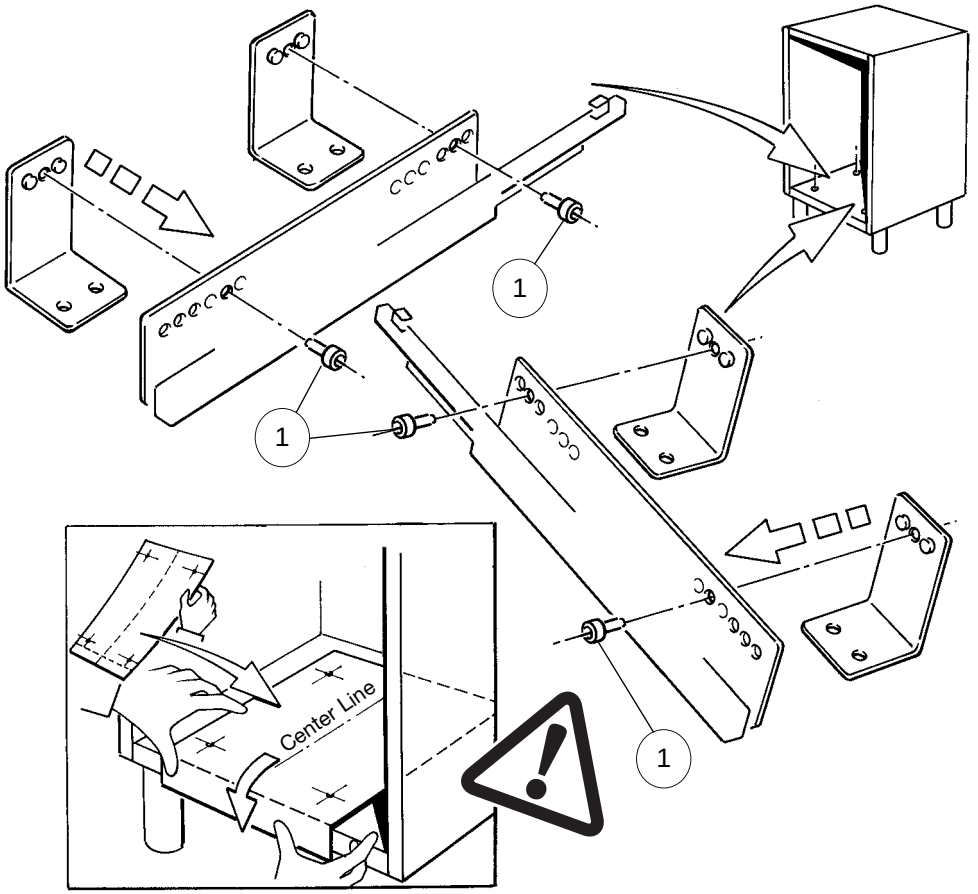

1. Fix Brackets to slides
2. Fix slides to bottom cabinet referring to template

Next Step
GO TO PAGE 13

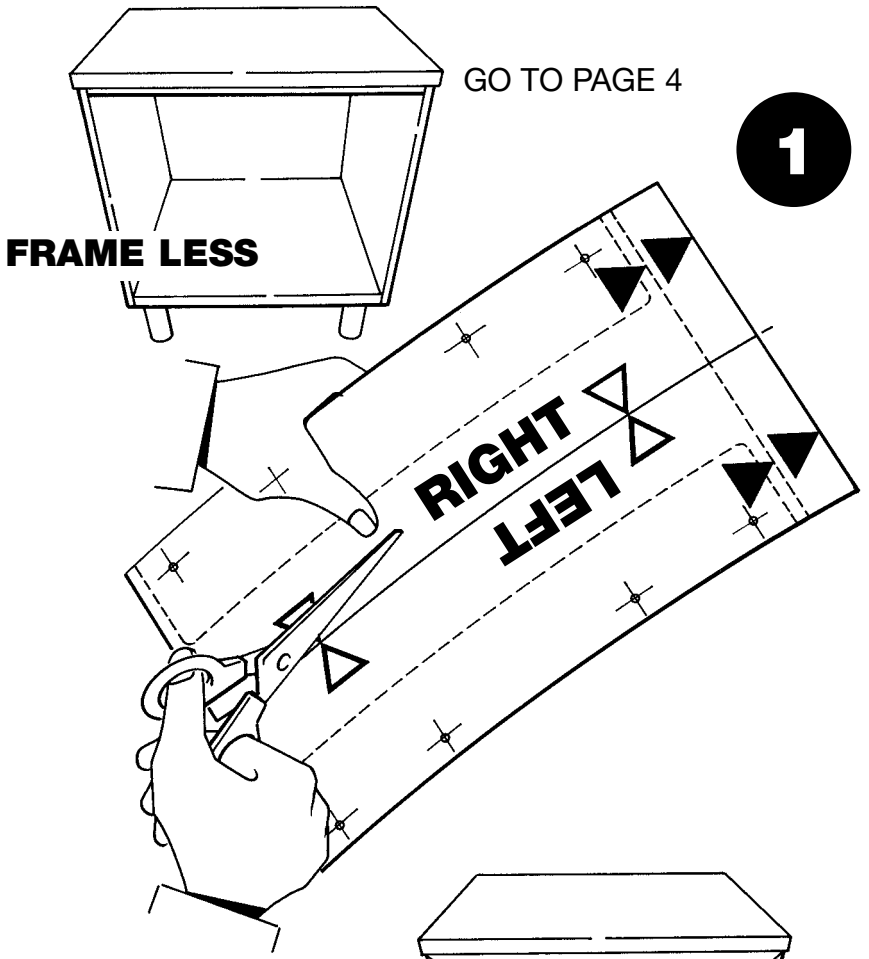
GO TO PAGE 4
1
FRAME LESS
RIGHT
LEFT
FACE FRAME
GO TO PAGE 6

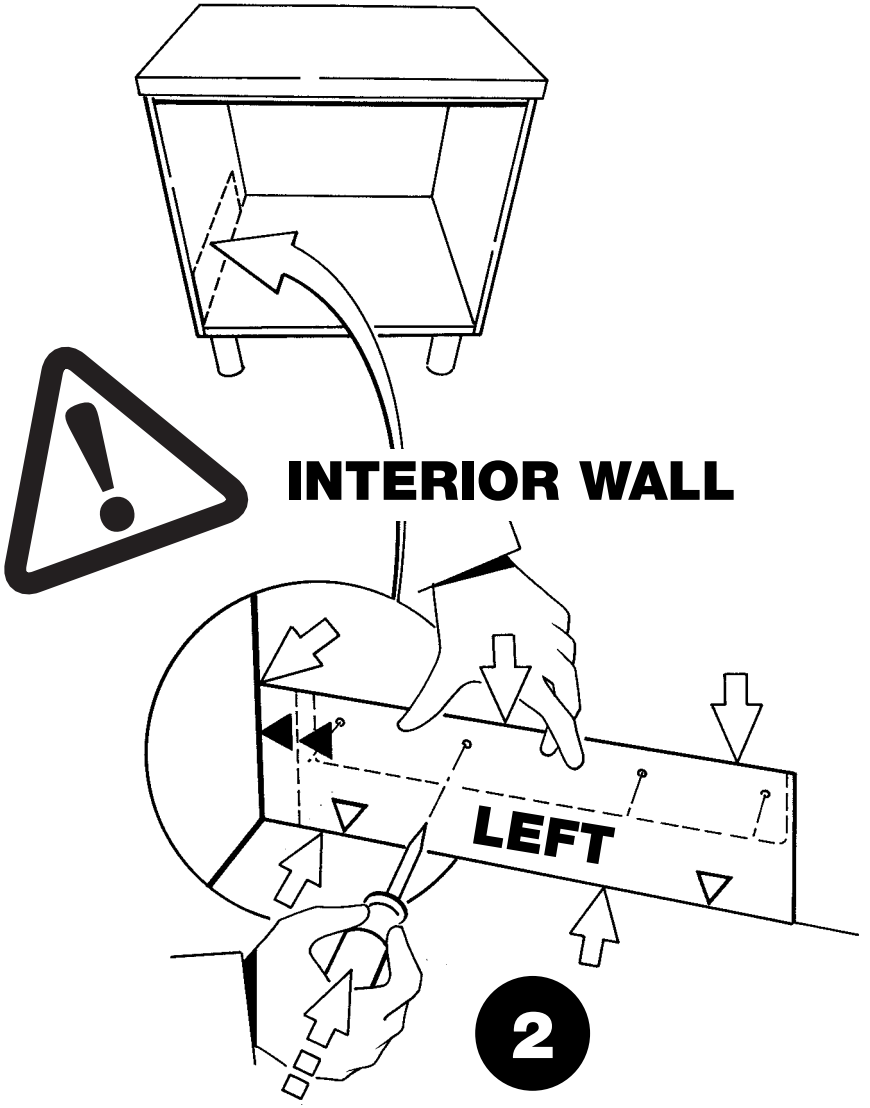

DRILL PILOT HOLES IN EACH SIDE OF CABINET AT LOCATION FOUND BY THE TEMPLATE

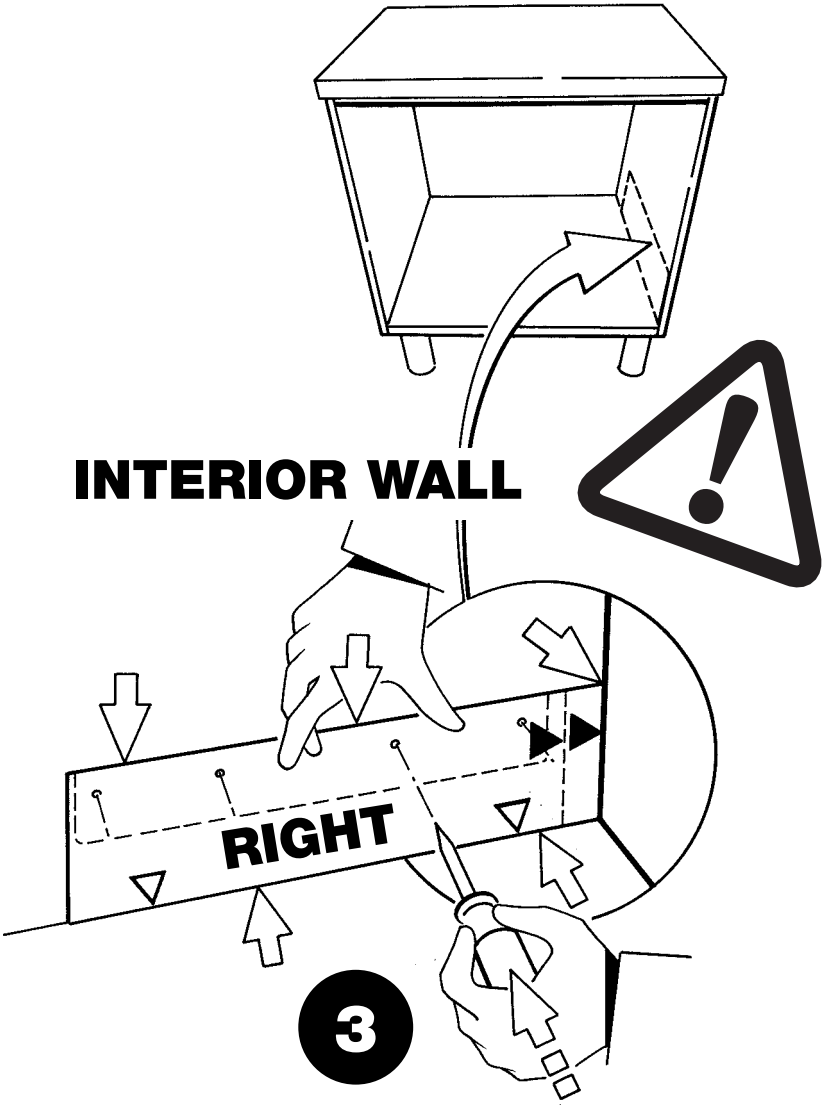

DRILL PILOT HOLES IN EACH SIDE OF CABINET AT LOCATION FOUND BY THE TEMPLATE

Next Step
GO TO PAGE 9

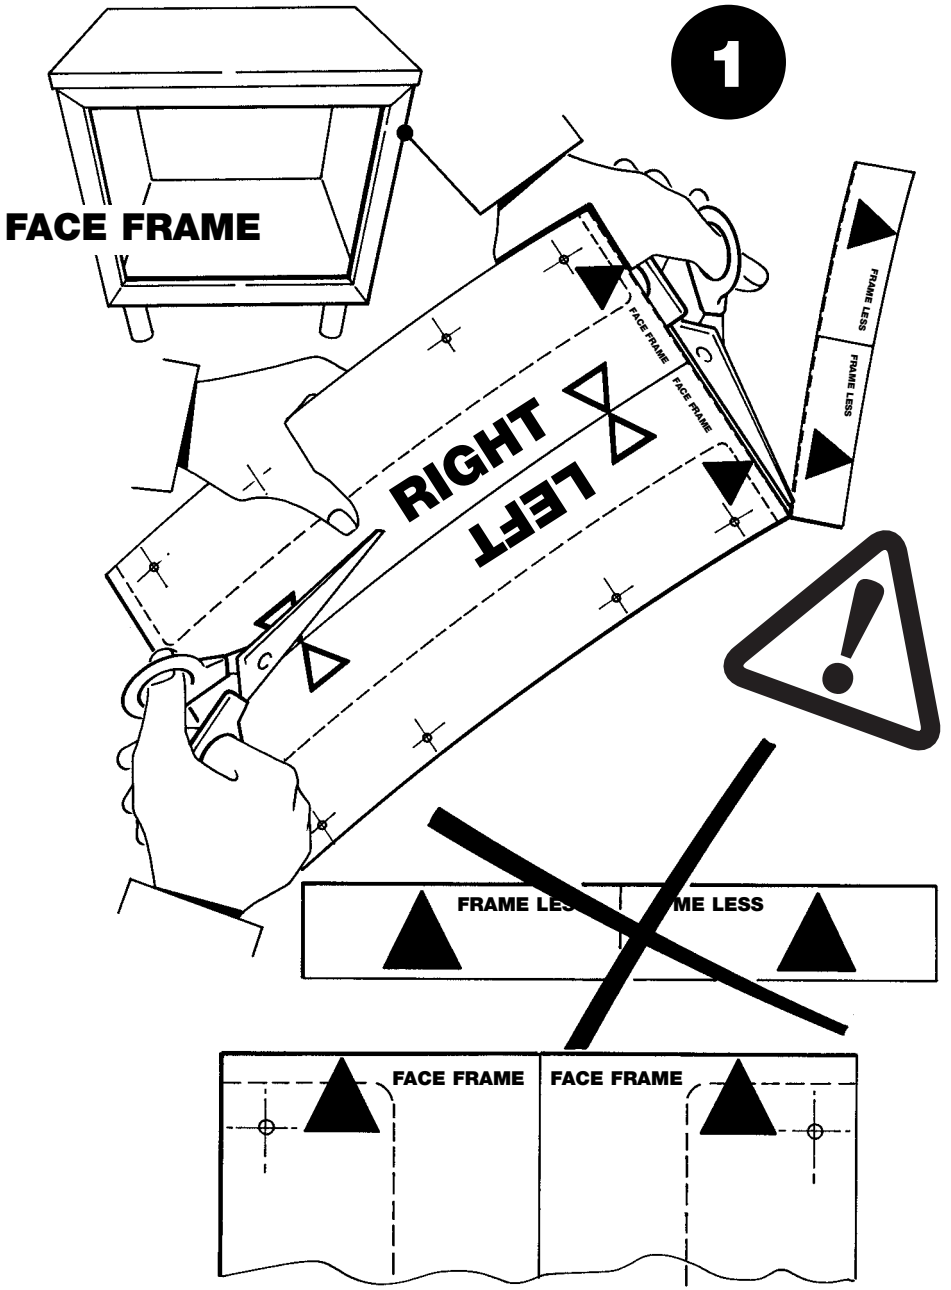
1
FACE FRAME
RIGHT
LEFT
FACE FRAME
FACE FRAME
FRAME LESS
FRAME LESS
FRAME LESS
FACE FRAME
FACE FRAME

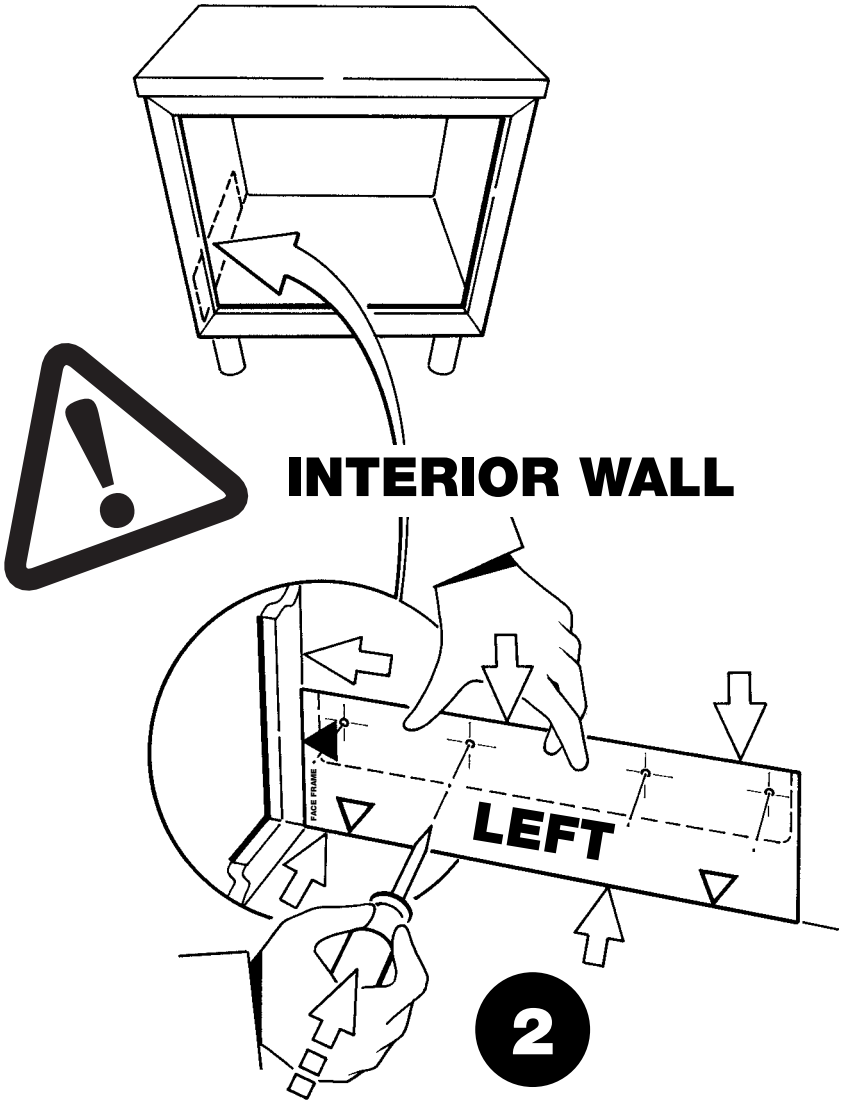

DRILL PILOT HOLES IN EACH SIDE OF CABINET AT LOCATION FOUND BY THE TEMPLATE

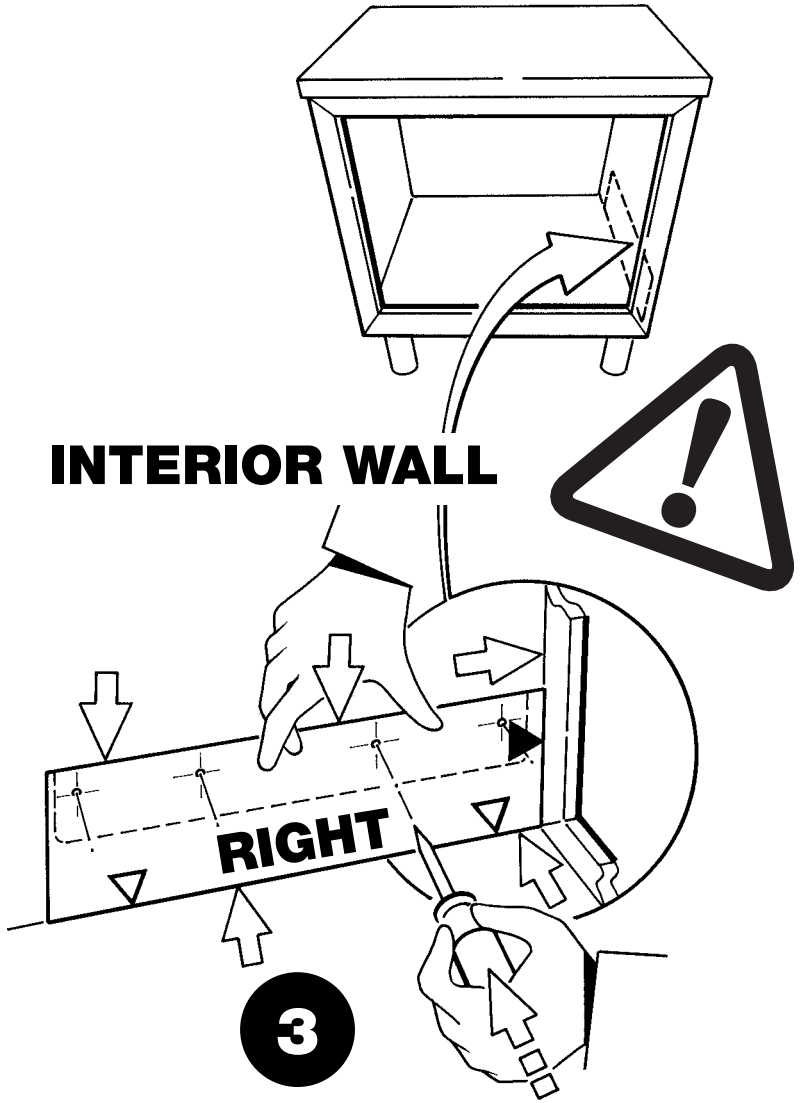

DRILL PILOT HOLES IN EACH SIDE OF CABINET AT LOCATION FOUND BY THE TEMPLATE

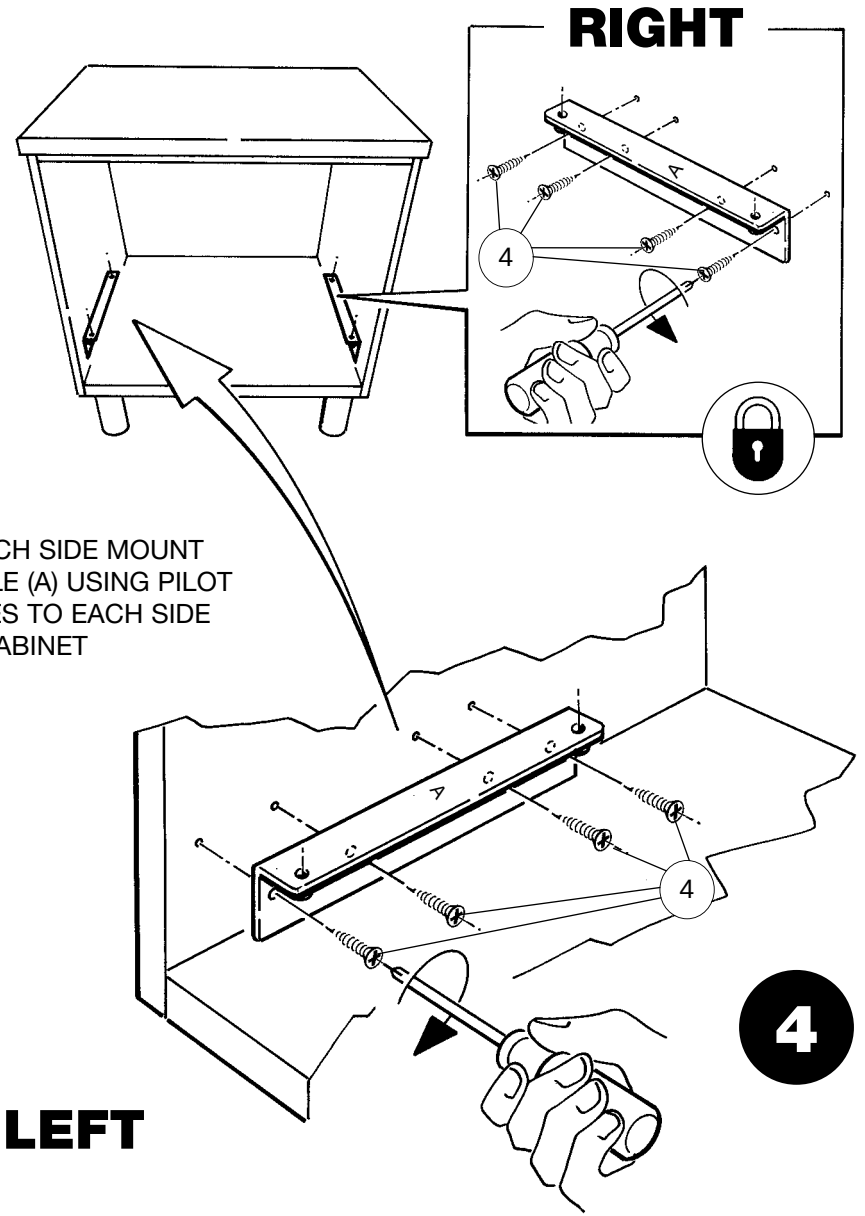
RIGHT
4
ATTACH SIDE MOUNT
ANGLE (A) USING PILOT
HOLES TO EACH SIDE
OF CABINET
A
4
4
LEFT

ATTACH SLIDES TO SIDE
MOUNT ANGLE (B)

5

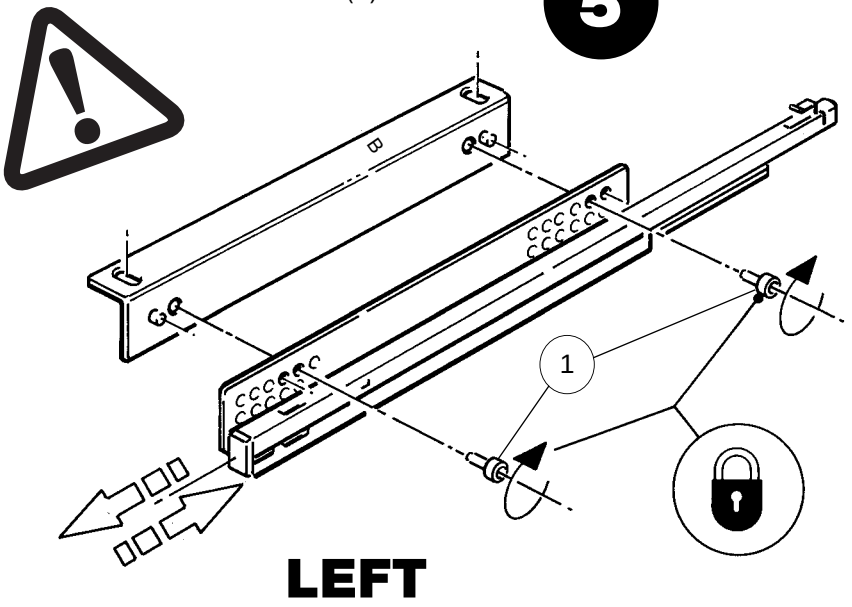

LEFT

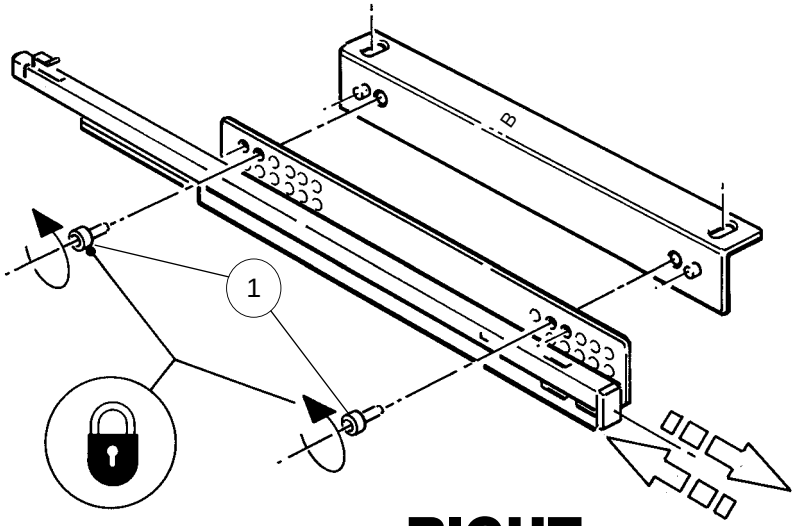

RIGHT

JOIN SIDE MOUNT ANGLES
(A) AND (B) AS SHOWN

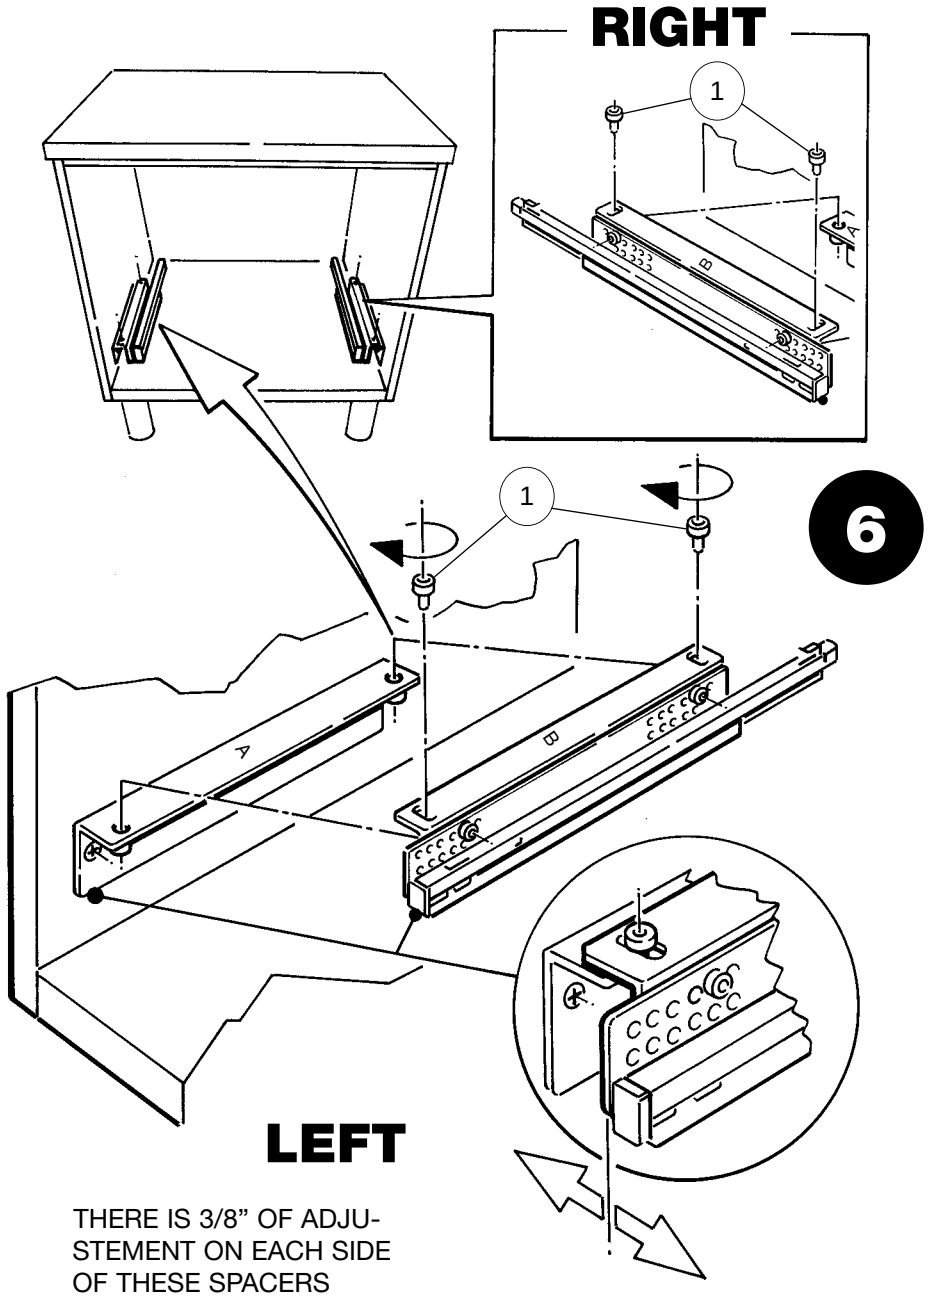

THERE IS 3/8" OF ADJU-
STEMENT ON EACH SIDE
OF THESE SPACERS

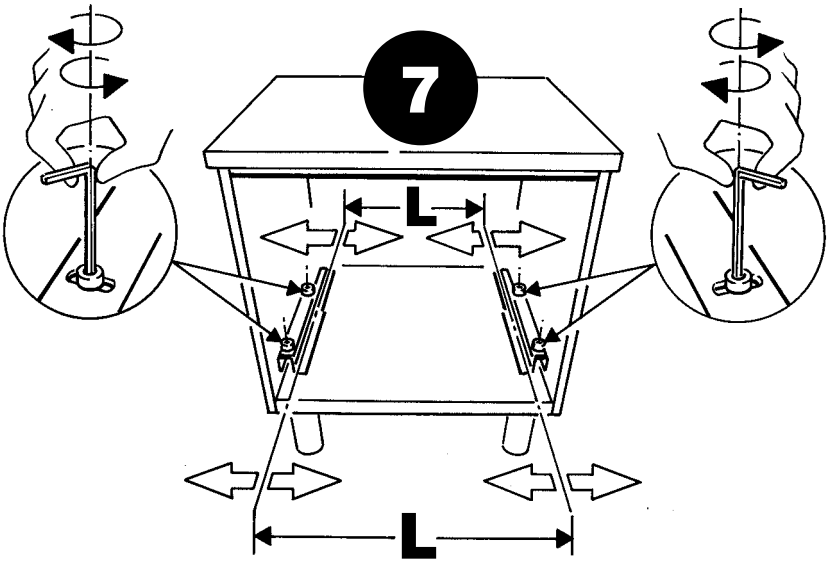

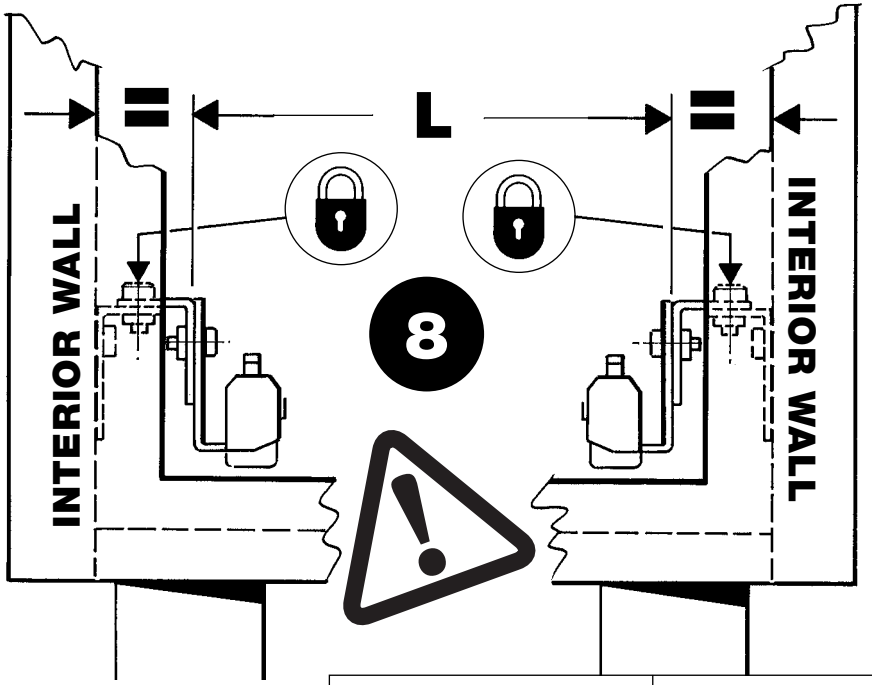

ADJUST WIDTH BETWEEN SLIDES, DIMENTION "L" AS SHOWN IN THE FOL-LOWING TABLET:

DIMENTION CABINET	DIMENTION "L"
15"	11 3/8"
18"	14 3/8"
24"	20 3/8"
36"	32 3/8"

Front Door With Hinges

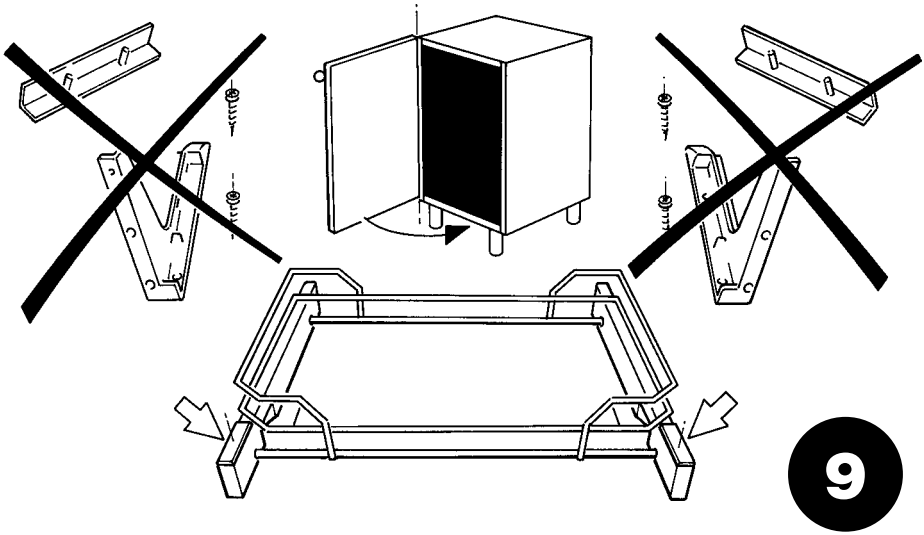

INSTALL RECTANGULAR COVER OVER ALLUMINIUM SLIDE COVER

Front Door Applied To Pull-out Basket

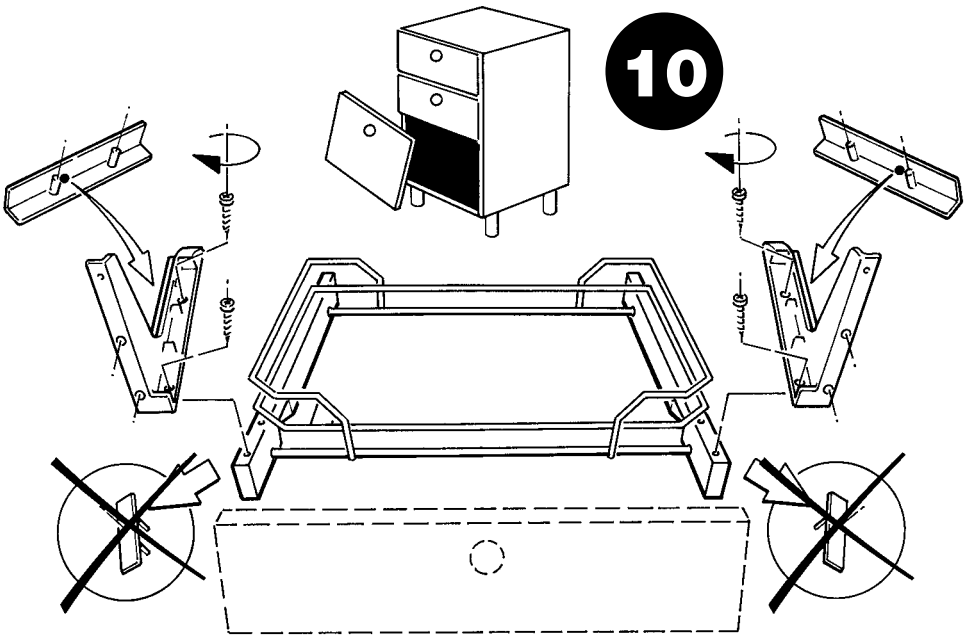

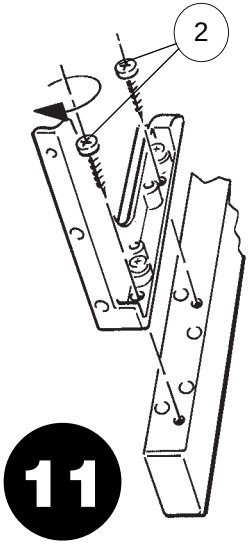

ATTACH DOOR MOUNT BRACKETS TO TOP OF ALLUMINIUM SLIDE COVER USING SCREWS

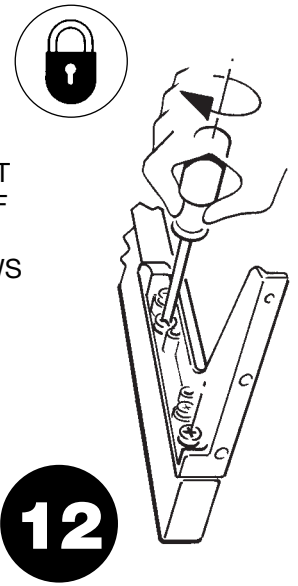

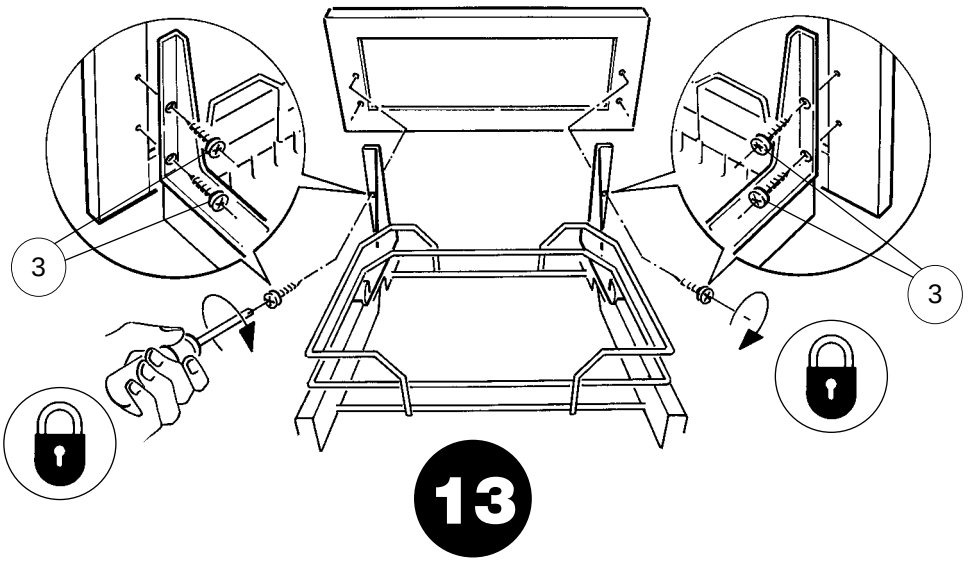

ATTACH BASKET WITH BRACKETS TO CABINET DOOR. BE SURE UNIT IS CENTERED SIDE TO SIDE AND AT THE PROPER HEIGHT TO ALLOW PROPER OVERHANG OF DOOR AT TOP AND BOTTOM.

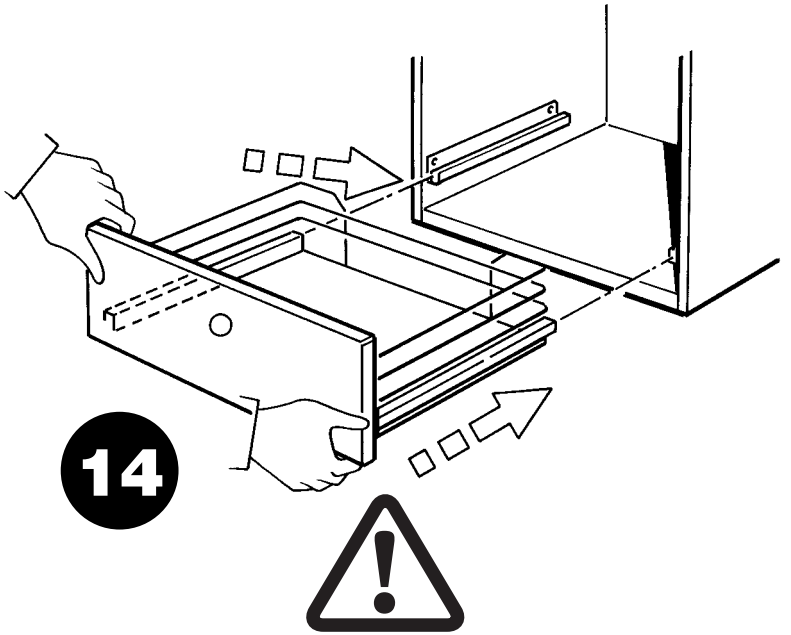

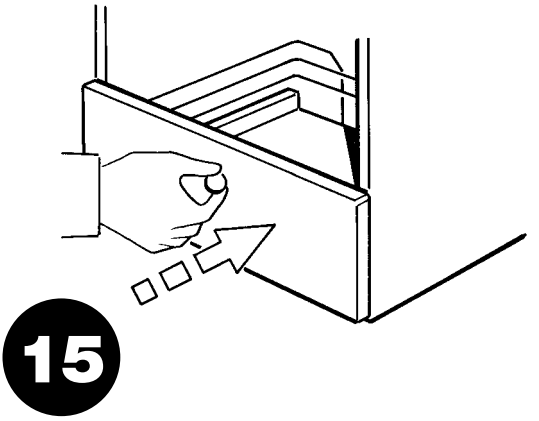

WITH SLIDES IN CLOSED POSITION, SET UNIT ON SLIDES AND PUSH IN AS FAR AS IT WILL GO. THIS WILL ENGAGE LOCK ON TO SLIDES.

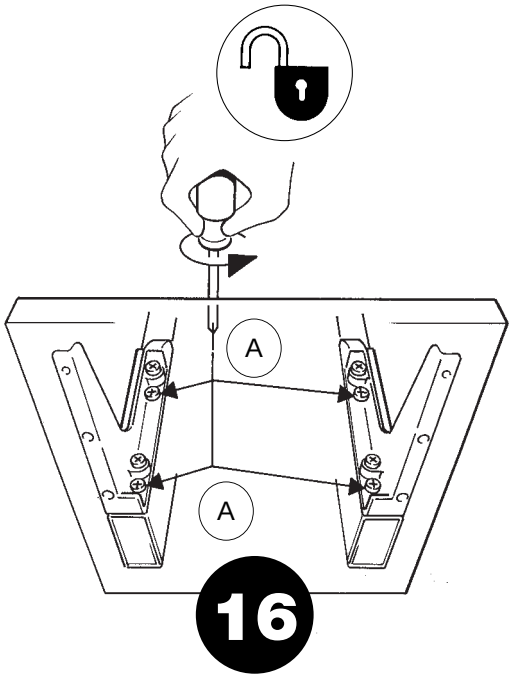

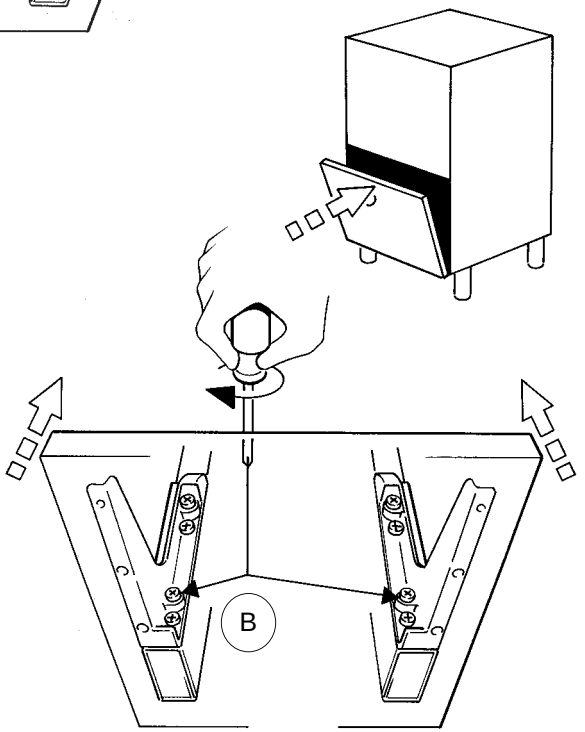

WHEREAS TO TILT TOP OF DOOR OUT, LOOSEN ATTACHMENT SCREWS (A), TIGHTEN BACK ADJUSTMENT SCREWS (B)

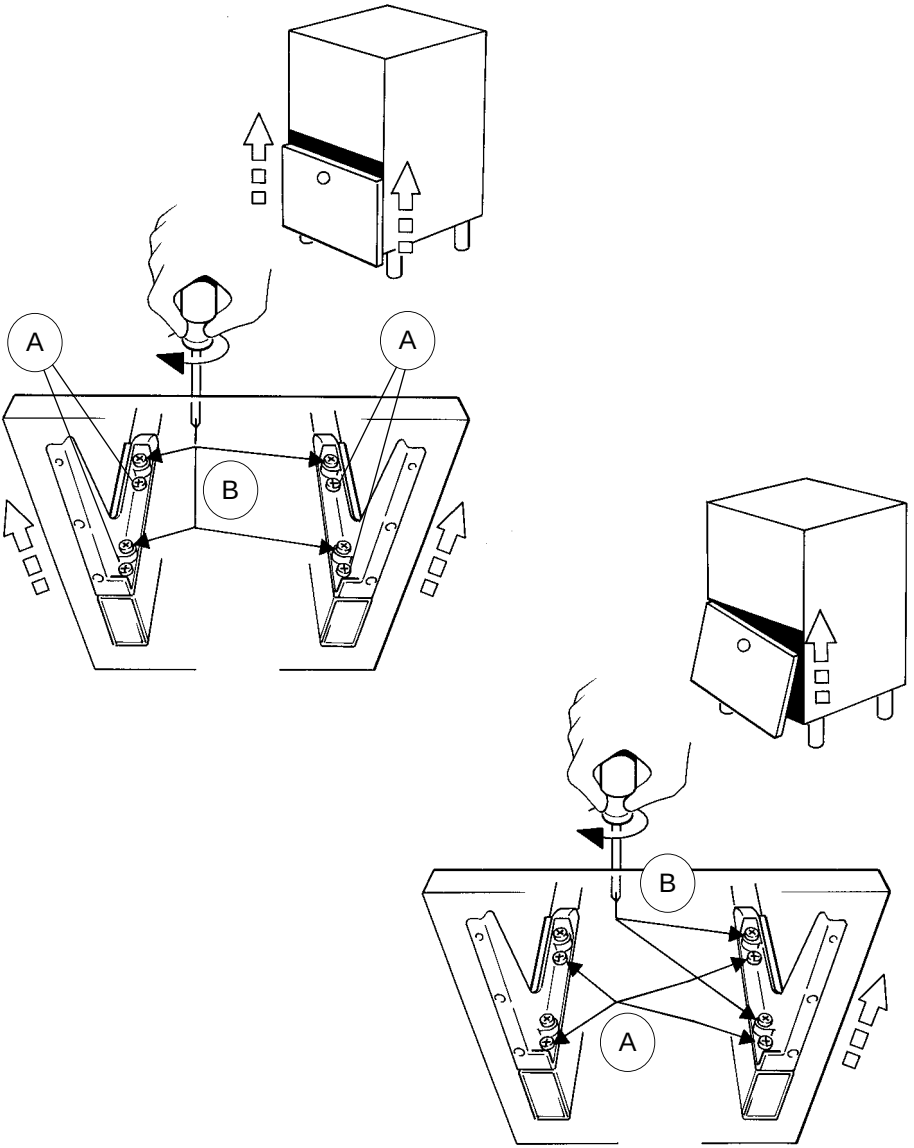

TO RAISE DOOR, LOOSEN ATTACHMENT SCREWS (A) AND TIGHTEN ADJUSTMENT SCREWS (B). TO LEVEL DOOR, RAISE LOW SIDE ONLY UNTIL DOOR IS LEVEL.

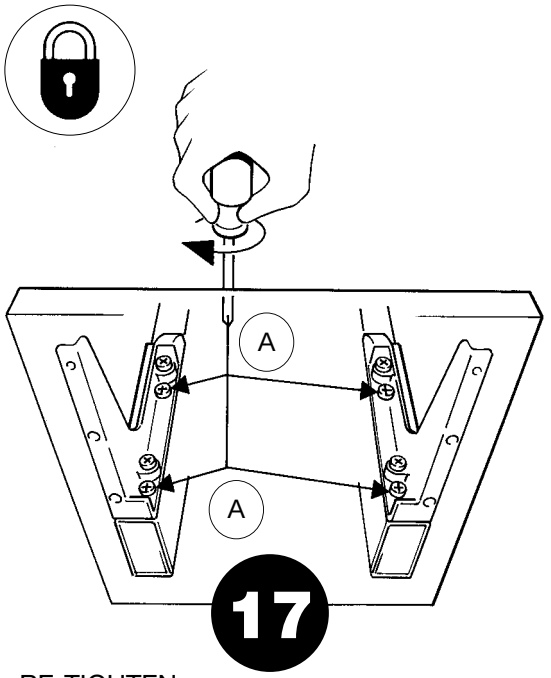

RE-TIGHTEN
ATTACHMENT SCREWS (A).

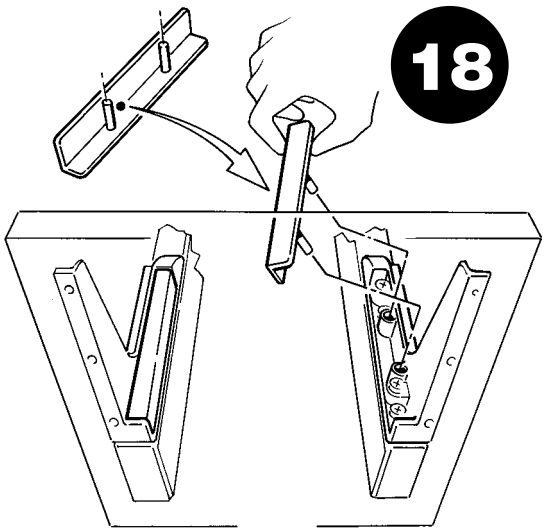

INSTALL SNAP ON COVER OVER ATTA-
CHMENT AND ADJUSTMENT SCREWS.

REMOVING THE UNIT

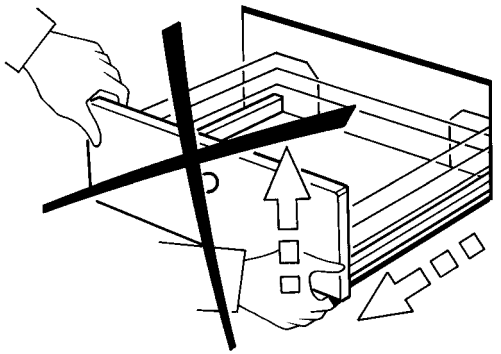

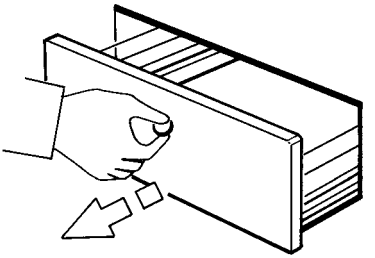

19

PULL UP THE UNIT NO MORE THAN 1/3 OF THE DEPTH (7” APPROX.)

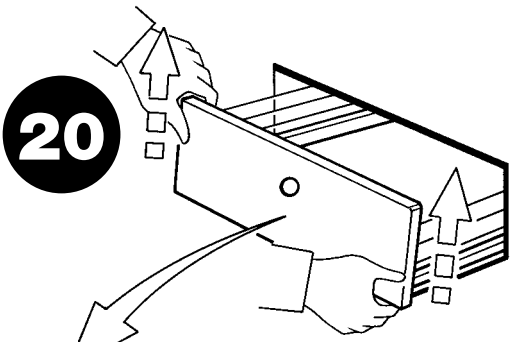

20

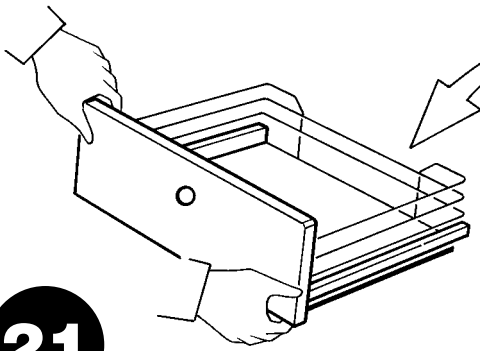

21

PULL UP THE UNIT BY FRONT DOOR. THIS WILL RELASE THE ALLUMINIUM SLIDE COVERS FROM THE SLIDES

REMOVE THE UNIT

Note:

REV-A-SHELF
Your Worldwide Accessory Source!
STORAGE ORGANIZING

If you have any questions or would like additional information on the rest of our products, please contact our Customer Service Specialists between 8 Am and 5Pm Eastern Time at:

1-800-626-1126